



Zephyr Lock

BETTER SECURITY THROUGH INNOVATION

Model 5100 Club Series Electronic RFID Locker Lock System

Shared Use Instructions:

To Lock with RFID Card:

1. Select any available locker. Place belongings in locker and close door.
2. Press power button to activate lock. The green light will begin to flash.
3. Touch the user card to the front of the lock. The red light will flash once and the bolt will extend to lock the lock.
4. The lock is now locked and secure.

To Unlock with Keypad:

1. Press power button to activate lock. The green light will begin to flash.
2. Touch the user card to the front of the lock. The lock will issue a beep to acknowledge the card and the bolt will retract unlocking the lock.
3. The lock is now open and available for the next user.

Permanent Use Instructions:

To pair your RFID User Card:

1. The lock must be set to factory default by an administrator before pairing a user card, following the steps in the "Supervisory Instructions".
2. Press the power button to activate the lock.
3. Touch the user card to the face of the lock. The lock will give a two-toned beep to acknowledge the lock is now paired with your card.

To Unlock with RFID User Card:

1. Press power button to activate lock. The green light will begin to flash.
2. Touch the user card to the front of the lock. The lock will issue a beep to acknowledge the card and the bolt will retract unlocking the lock for 5 seconds.
3. After 5 seconds the bolt will extend and will automatically relock by closing the door.
4. The lock is now locked and secure.

