



Zephyr Lock

BETTER SECURITY THROUGH INNOVATION

Model 5200 Club Series Electronic RFID Locker Lock System

Shared Use Instructions:

To Lock with Keypad:

1. Select any available locker. Place belongings in locker and close door.
2. Press power button to activate lock. The green light will begin to flash.
3. Enter any self-selected 4-Digit code, then press the lock/unlock button, the red light will flash once, and the bolt will extend to lock the lock.
4. The red light will continue to flash periodically to identify the locker as occupied.
5. If a code is incorrectly entered, the red-light flashes and gives audible beep 3 times indicating an incorrect combination has been entered.

To Unlock with Keypad:

1. Press power button to activate lock. The green light will begin to flash.
2. Enter you previously self-selected 4-Digit code, then press the lock/unlock button, the lock will give an audible beep and the bolt will retract unlocking the lock.
3. The lock is now open and available for the next user.

To Lock with RFID Card:

1. Select any available locker. Place belongings in locker and close door.
2. Touch the user card to the front of the lock. The red light will flash once, and the bolt will extend to lock the lock.
3. The lock is now locked and secure.

To Unlock with RFID Card:

1. Press power button to activate lock. The green light will begin to flash.
2. Touch the user card to the front of the lock. The lock will issue a beep to acknowledge the card and the bolt will retract unlocking the lock.
3. The lock is now open and available for the next user.

