



# Zephyr Lock

BETTER SECURITY THROUGH INNOVATION

## Model 6200 Professional Series Electronic RFID Locker Lock System

### Permanent Use Instructions

#### To Set User Code:

1. Lock must be set to the factory default (1, 2, 3, 4) or the current code must be known to set a new user code.
2. Press the power button to activate lock. The green light will begin to flash.
3. Enter the default or current code 4-Digit code, then press the lock/unlock button. The lock will give an audible beep.
4. Immediately press the power button, enter a new 4-digit user code, then press the lock/unlock button. The lock will give an audible beep and flash green.
5. Immediately press the power button again, re-enter the new 4-digit user code, then press the lock/unlock button. The lock will give a long audible beep and flash red to acknowledge that a new code has been set.
6. The lock is now set to the new 4-digit user code.

#### To Unlock with Keypad:

1. Once permanently assigned the lock will automatically relock after every opening.
2. Press power button to activate lock. The green light will begin to flash.
3. Enter your self-selected 4-Digit code, then press the lock/unlock button. The lock will give an audible beep and the knob can be moved from the locked to the unlocked position for 5 seconds.
4. Once the knob is turned back to the locked position, it cannot be opened again without repeating the open with combination procedure.
5. While in Permanent Use mode the lock will retain its 4-digit user code until either cleared by a supervisor or changed by the current user

#### To Pair your RFID User Card:

1. Press the power button to activate the lock.
2. Touch the user card to the face of the lock. The lock will give a two-toned beep to acknowledge your lock is now paired with your card.
3. The lock is now in the locked position.

#### To Unlock with RFID User Card:

1. Press power button to activate lock. The green light will begin to flash.
2. Touch the user card to the front of the lock. The lock will issue a beep to acknowledge the card and can now be unlocked.
3. Turn the knob clockwise to the unlocked position. The lock is now unlocked and ready to be pulled open.
4. After use of the locker, turn the knob back clockwise to the locked position. As long as 5 seconds has passed it can no longer be toggled back to the unlocked position without re-opening with your card.
5. While in Permanent Use mode the lock will retain its pairing with a use card until cleared by a supervisor.

