



Zephyr Lock

BETTER SECURITY THROUGH INNOVATION

Model 6200 Professional Series Electronic RFID Locker Lock System

Shared Use Instructions

To Lock with Keypad:

1. Select any available locker. Place belongings in locker and close door.
2. Press power button to activate lock. The green light will begin to flash.
3. Enter your own self-selected 4-Digit code, then press the lock/unlock button, the red light will flash once.
4. Turn the knob counterclockwise to the locked position. The lock is now locked and secure.
5. The red light will continue to flash to identify the locker as occupied.
6. If a code is incorrectly entered, the red-light flashes and gives audible beep 3 times indicating the incorrect number of buttons have been pressed.

To Unlock with Keypad:

1. Press power button to activate lock. The green light will begin to flash.
2. Enter your previously self-selected 4-Digit code, then press the lock/unlock button, the lock will give an audible beep.
3. Turn the knob clockwise to the unlocked position. The lock is now unlocked and ready to be pulled open.
4. The lock is now available for the next user.

To Lock with RFID User Card:

1. Select any available locker. Place belongings in locker and close door.
2. Turn the knob counterclockwise to the locked position.
3. Press power button to activate lock. The green light will begin to flash.
4. Touch RFID card to face of lock, the red light will flash once.
5. The lock is now locked and secure.
6. The red light will continue to flash to identify the locker as occupied.
7. If a non-active RFID card is incorrectly used, the green light flashes indicating the card is not correct.

To Unlock with RFID User Card:

1. Press power button to activate lock. The green light will begin to flash.
2. Turn the knob clockwise to the unlocked position.
3. The lock is now unlocked and available to the next user.
4. If a non-active RFID card is incorrectly used, the green light flashes indicating the card is not correct.

